

Voe House Fire Alarm Instructions

Voe House has an integrated fire alarm system for your safety. There are flame / smoke detectors located in all the main rooms in the house. Please review the fire safety plan in the welcome book and on the wall for more details. There is a possibility the fire alarm system can be activated by accident due to cooking fumes or by steam from the kettle.

Please review the information below regarding the fire system control panel and what to do in the case of a FALSE alarm.



The picture to the left shows the fire panel in normal mode. There are no lights on and no faults or alarms displayed. Note the key hanging on the chain to the right-hand side of the panel.

When the alarm is activated all sensors in the house will sound, also the 4 x mag catch doors will automatically close.



The fire ceiling sensor that has been activated will have red flashing light.

The zone that the activated sensor is in will be displaced by a red light above the zone number, 8 zones are shown in the bottom picture. Only zones 1 to 4 are in use in Voe House.

In the case of a CONFIRMED false alarm guests may silence and reset the system. This is simply done by using the key in the panel as shown in the picture to the left. Insert and turn the key to the right and a yellow light comes on.



The alarm can then be silenced by pressing the red “silence alarms” button. When the cause of the false alarm has cleared, and the sensor no longer flashing red, press the red “reset system” button. When the system is reset the magnetic catch doors can be opened and held open on the magnets.