




Voe House Heating and Hot Water Instructions

Voe House is primarily heated with the boiler in the laundry. The pre-programmed controller is located in the main kitchen. There are also 2 electric radiators, one in the accessible toilet next to the kitchen, and in the backdoor lobby. Voe House hot water is provided by 2 hot water cylinders, 1 in the laundry and in the cupboard in "Rabbit" for the top floor bedrooms. The immersion heater switches are labelled and should remain on.

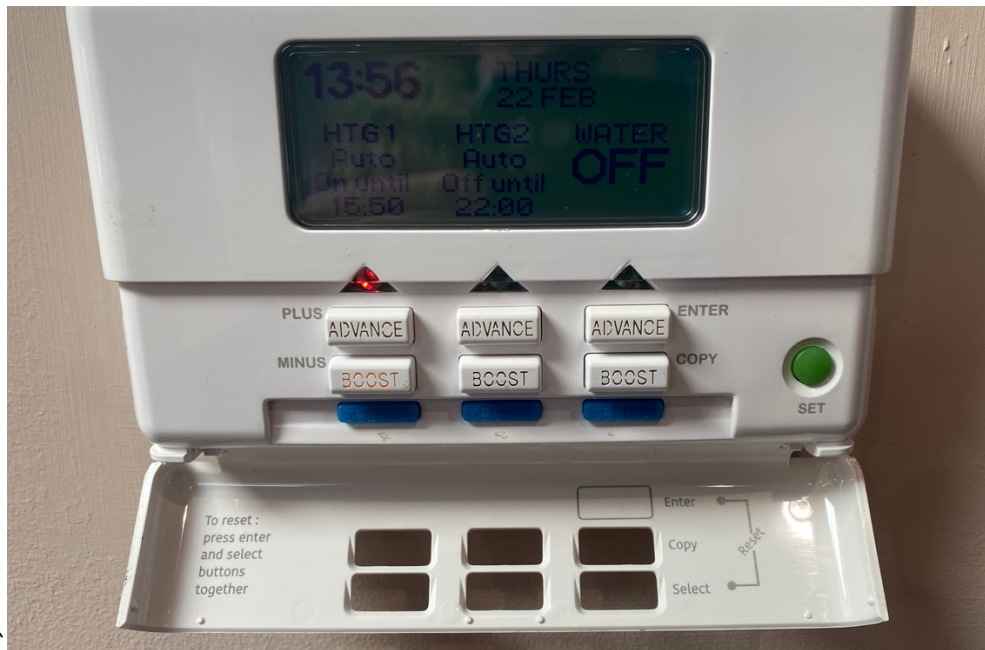

The picture above shows the heating controller. The heating will be set when you arrive. If necessary the heating settings can be changed as described below.

There are 3 heating circuits, the red triangle light shows which is on. HTG1 is the all the ground floor radiators, HTG2 is the 1st and 2nd floor radiators and towel rails, WATER is the hot water tank in the laundry.

The boost button for each of the 3 circuits can put the heating on for an additional 1 or 2 hours, provided the controller is set to auto.

The blue buttons beneath the flap can be used to select "OFF", "ON" [24hrs], "ALLDAY.

The electric panel heaters in the toilet and at the rear lobby will also be set to manual on. The temperature can be adjusted using the controls on the top of the panel heater.